


MËX

vacio

VM601

MËX
vacio
VM601

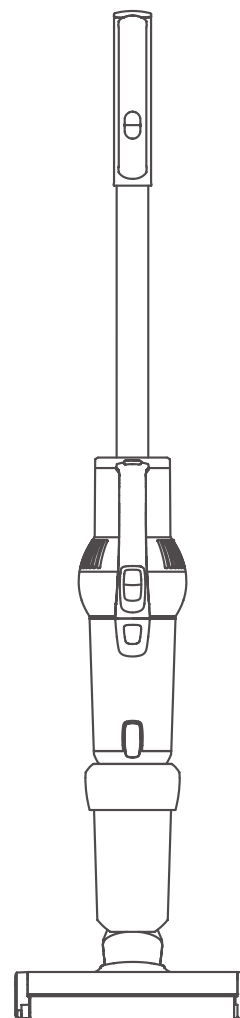

INSTRUCTION MANUAL
Cordless Vacuum Cleaner

คู่มือการใช้งาน
เครื่องดูดฝุ่นไร้สาย

Read instruction manual before use.
โปรดอ่านคู่มือทุกครั้งก่อนการใช้งาน

CONTENTS

SAFETY PRECAUTION	E-1
PARTS AND ACCESSORIES	E-3
VACUUM CLEANER ASSEMBLING	E-4
ACCESSORIES	E-5
ACCESSORIES ASSEMBLING	E-6
INSTRUCTION FOR USE	E-8
Upright Unit	E-8
Handheld Unit	E-8
Battery Charging	E-8
Upright and Handheld Unit Disassembling for Cleaning	E-9
TROUBLE SHOOTING	E-11
SPECIFICATION	E-12
PACKING LIST	E-12

SAFETY PRECAUTION

WARNING

Read all the instructions and only use the appliances for its intended purpose.

Children should be supervised to ensure that they don't play with the appliances.

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

DANGER

DO NOT

- Do not use this appliance to vacuum the following:-
 - Water, moist objects, liquids, ashes, lighted cigarette ends, etc.
 - Inflammable, combustible substances, or anything that is burning or smoking.
 - Toxic substances, e.g. cleaser, chlorine, ammonia, etc.
 - Toner of laser printer or copier. It may make explosion or fire.
 - Plastic dust, cement, etc. to prevent clogging.
- Do not use without dust cup and filters in place.
- Do not store the appliance in heat place.
- Do not use this appliance to vacuum hard pointed objects, large objects, etc. It may make damage to the appliance.
- Do not use the appliances outdoors.
- To prevent the reduction in air flow, ensure that all orifices/vents on the appliance are kept free from blockages and do not insert any objects into these orifices/vents.

WARNING

Store package (including plastic bag) away from childrens for safety reasons.

Read all the instructions from this instruction manual only.

Store the power cord gently without pull forcing.

Store the power cord away from heat sources.

Extra care to keep hair, cloths, and part of the body away from the vacuum tube.

Switch off the appliance before plugging and unplugging from the socket.

Remove dust from the dust cup regularly to maintain efficiency.

Do not close the door over the power cord. Do not place the power cord near sharp objects.

Do not operate the appliance with a damaged power cord or plug. Call customer service center or authorised dealer for consulting.

Do not handle the plug with wet hands.

Verify power supply is correct to specification of the appliance. Otherwise, it may damage.

Do not use the appliance, if there is abnormal noise, smell, smoke during operation. Call customer service center or authorised dealer for consulting.

Assembly the product completely, before plugging.


Clean before next use, if there is clogging in any parts.

Keep the appliance in indoor and dry only. Store the appliance away from high heat sources.



Extra care should be taken when vacuuming staircases or inflammable area.

Always remove the plug from the socket, after use or before attempting any form if maintenance or cleaning.

PARTS AND ACCESSORIES

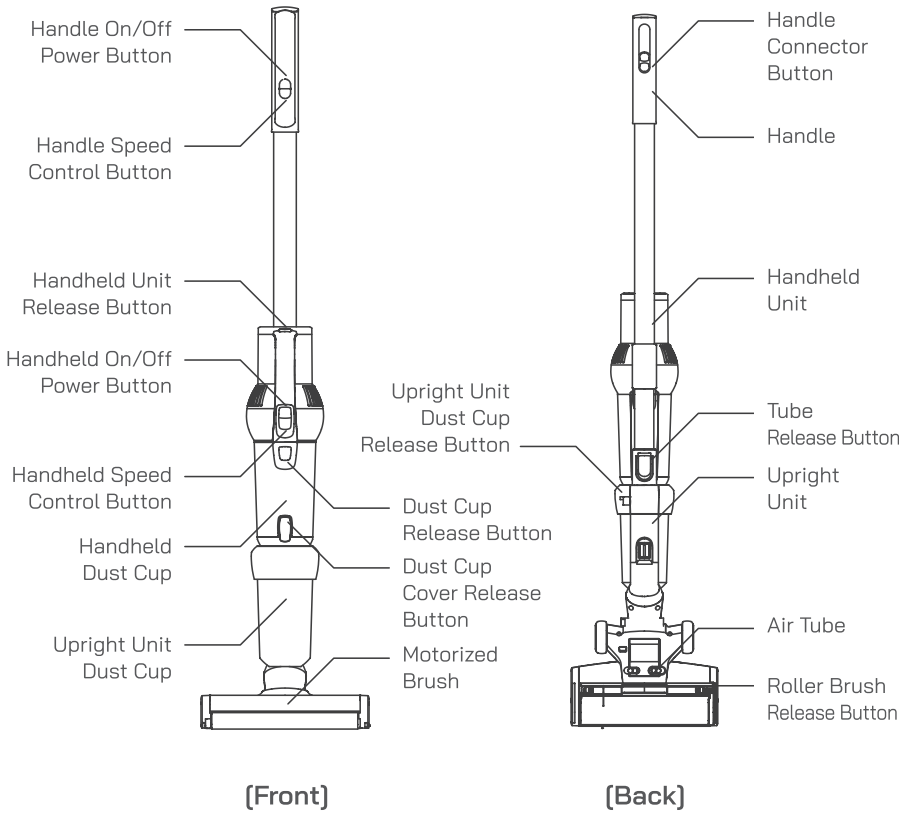


ACCESSORIES

  
				
2-in-1 Crevice Brush	2-in-1 Upholstery Brush	Pet Brush	Connector	Charging Panel
				
Soft Brush	Motorized Mite Brush	Extension Hose	Adaptor	Charging Base

VACUUM CLEANER ASSEMBLING


- 1. Assembly handle unit to upright unit**
Keep handle on the same side of motorized brush.

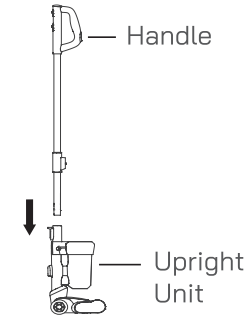


- 2. Assembly handheld unit to upright unit**

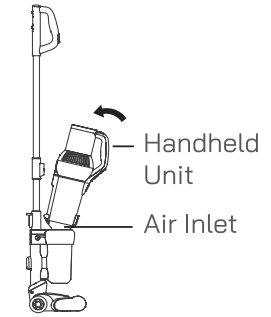

- 3. Assembly charging unit**
Place the charging panel to the charging base.

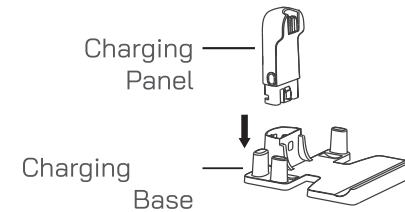




- 4. Charge Battery**
Place the vacuum cleaner on the charging base.

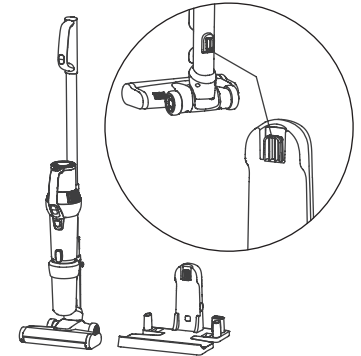

ACCESSORIES

  
Accessories can be connected to ONLY handheld unit.
Extension hose, handle, and connector is applicable,
if required.

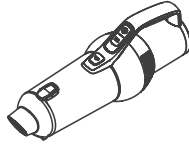


Accessories	Accessories Name	Purposes
	2-in-1 Crevice Brush	To clean crevices, doors, windows, dead corners, and other narrow areas.
	2-in-1 Upholstery Brush	To clean dust on closet, sofa, windows, car seats, including table surface, etc.
	Soft Brush	To clean dust on book shelves, curtains, and sofa, etc.
	Pet Brush	To clean pet hair on cloths, etc.
	Motorized Mite Brush	To remove mite on mattress, pillow, and sofa, etc.
	Extension Hose	To clean hard to reach areas.
	Connector	To connect various brush with tube.

ACCESSORIES ASSEMBLING


DIRECT ASSEMBLING

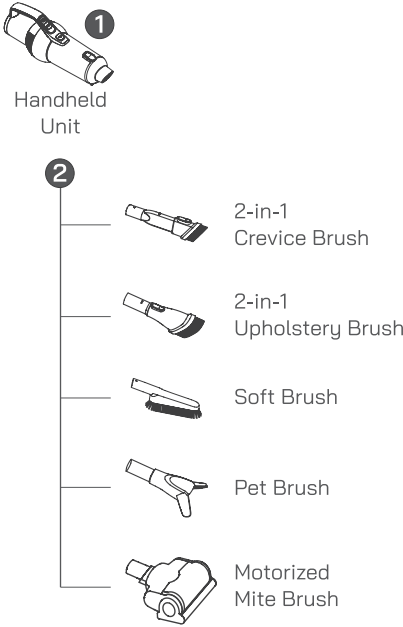


ASSEMBLING SAMPLE

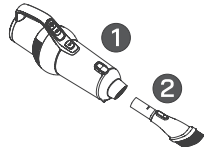


ASSEMBLING WITH EXTENSION HOSE

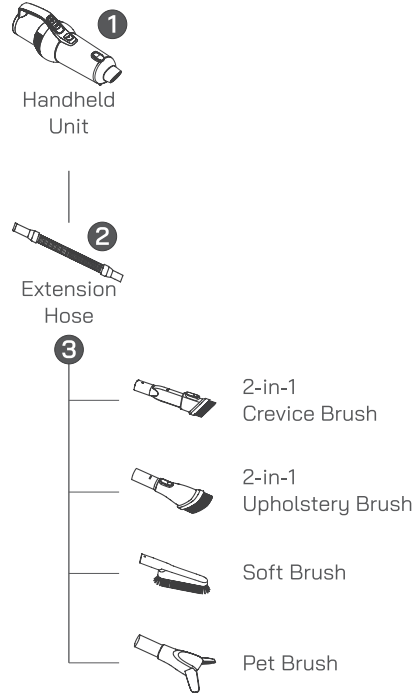


ASSEMBLING SAMPLE

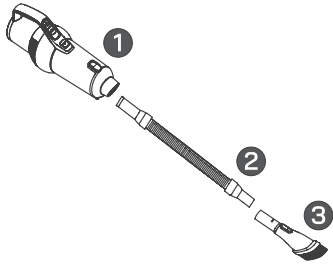


ASSEMBLING WITH HANDLE

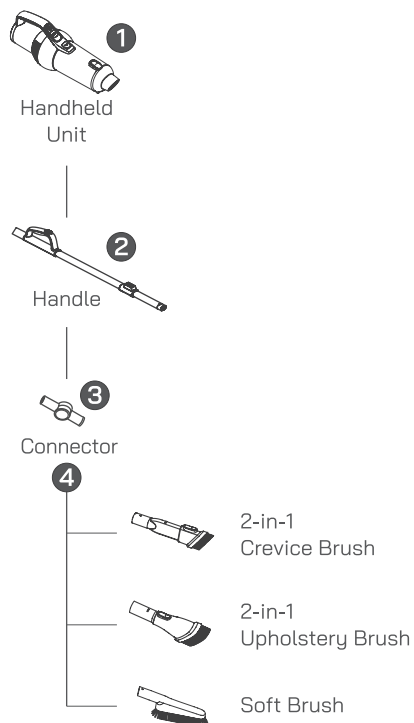


ASSEMBLING SAMPLE

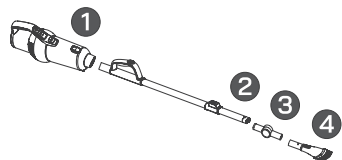

ASSEMBLING WITH EXTENSION HOSE AND HANDLE

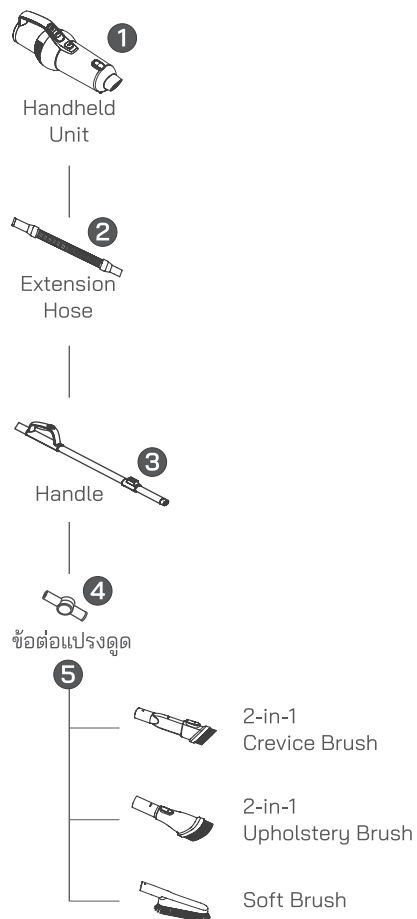


ASSEMBLING SAMPLE

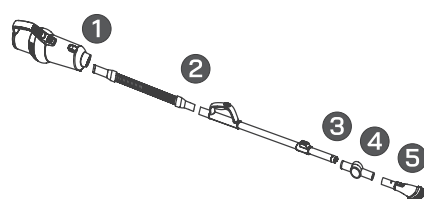

INSTRUCTION FOR USE


FOR UPRIGHT UNIT

- Press on/off button to operate the vacuum cleaner. Green light on battery will be displayed during operation.
- Press speed control button to switch speed among 3 levels.

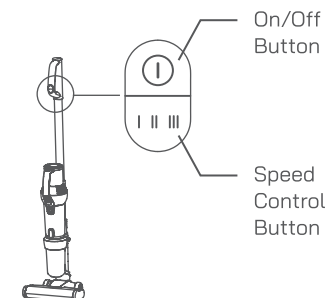

FOR HANDHELD UNIT

- Press on/off button to operate the vacuum cleaner. Green light on battery will be displayed during operation.
- Press speed control button to switch speed among 3 levels.

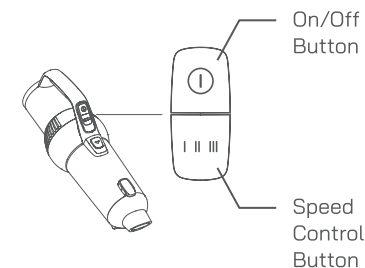


BATTERY CHARGING

Assembly handheld unit to upright unit. Place it to the charging base then.




ADVICES ON BATTERY

- Charge battery, if battery is low, to prolong battery life.
- Extend to charge battery by 1-2 hours after fully charged, for the first 3 charging.
- Extend to charge battery by 30 mins to an hour after fully charged to prolong battery life.
- Unplug adapter after fully charged.

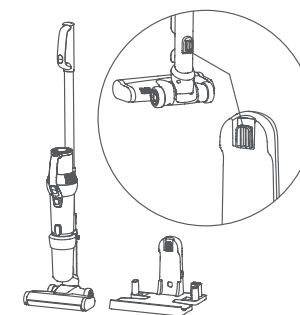

UPRIGHT AND HANDHELD UNIT DISASSEMBLING FOR CLEANING


HANDHELD UNIT DISASSEMBLING

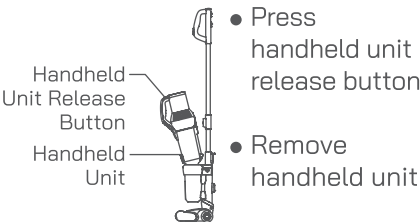


- Press handheld unit release button
- Remove handheld unit

DISASSEMBLING FOR STORAGE

- Set handle tilt 45 degree to motorized brush.
- Press tube release button and remove.

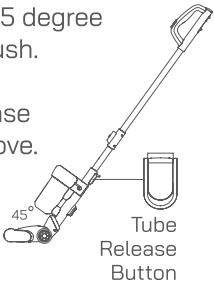


Purposes	Procedures
To clean handheld dust cup	1. Press dust cup release button and remove dust cup. 2. Press dust cup cover release button to dust inside. 3. Remove cyclone set from dust cup for cleaning. 4. Clean HEPA filter. 5. Clean cyclone air inlet.

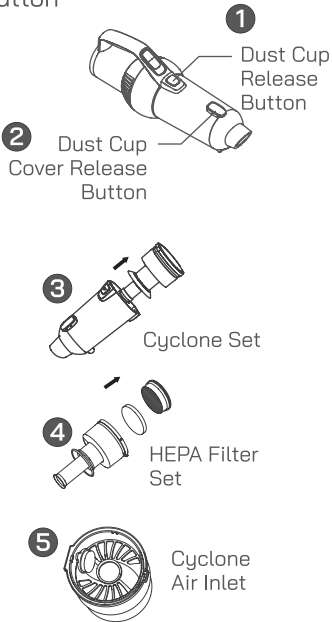

⚠ ADVICES ON CLEANING

- **EVERY PARTS MUST BE DRIED BEFORE REASSEMBLY.**
- Clean the dust cup after use every time.
- Clean the roller brush after long use to keep operation efficiency.
- Clean the dust cup and HEPA filter periodically. Please change, if they are clogged.
Supplied can be order from customer service center or authorized dealers.

Purposes	Procedures
To clean upright unit dust cup	1. Press upright unit dust cup release button. Remove dust then. 2. Turn parts inside the dust cup counterclockwise for cleaning.
To clean motorized brush	1. Press roller brush release button. 2. Remove roller brush for cleaning.
To clean motorized brush air inlet	1. Slide air inlet cover release button to open. 2. Pull out air tube for cleaning.

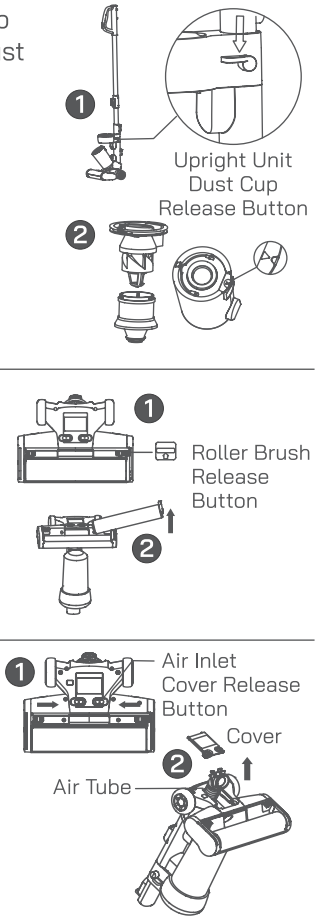

TROUBLESHOOTING

Symptoms	Possible Causes	Solutions
Motor is not working	Battery is empty.	Recharge battery.
	The handheld vacuum cleaner does not install into the upright vacuum cleaner correctly.	Install the handheld vacuum cleaner and upright vacuum cleaner correctly.
Low suction	Dust cup is full.	Empty dust cup.
	HEPA filter is blocked by dust.	Clean or replace HEPA.
	Floor head hose or brushroll is entangled with hair.	Clean the floorhead.
No charging indicator shows during charging	The handheld vacuum cleaner does not install into the upright vacuum cleaner correctly.	Install the handheld vacuum cleaner and upright vacuum cleaner correctly.
Run operation duration is short	Battery is not fully charged.	Charge battery until fully charge.
	Battery is deteriorated.	Replace new battery.

If problem is still exist, please contact to customer contact center
Tel +66 2 817 8999 or authorized dealers.

SPECIFICATION

Product	Vacuum Cleaner
Model	VACIO VM601
Rated Voltage	28.8 Volts
Rated Power	500 Watts
Adaptor Input Voltage	100-240 V 50/60 Hz
Adaptor Output Voltage	34.2 V +/- 0.2 V / 600 mA +/- 30 mA
Battery	Li-Ion

PACKING LIST

Handheld Vacuum Cleaner	1 Pc.	2-in-1 Crevice Tool	1 Pc.
Motorized Brush	1 Pc.	2-in-1 Upholstery Tool	1 Pc.
Handle	1 Pc.	Soft Brush	1 Pc.
Adaptor	1 Pc.	Pet Brush	1 Pc.
Charging Panel	1 Pc.	Motorized Mite Head	1 Pc.
Charging Base	1 Pc.	Extension Hose	1 Pc.
Instruction Manual	1 Book	Connector	1 Pc.

MEMO

PEN K SERVICE CENTER
Tel +66 2 817 8999

66/3 Suksawat 76 Road. Bangchak.
Phra Pradaeng. Samutprakan 10130
THAILAND

e-mail: service2@penk.co.th
www.mexappliance.com