



K A T E

USER MANUAL

MEX Kettle KATE-KPLG105TW-1



Dear Customer,

Thank you for your purchase of our MEX KATE Electric Kettle Model: KPLG105TW-1 This product are designed for easy useage comfortable in order to provide full satisfaction for your family. We hope you enjoy using your new appliance.

Before using this product,please read instruction carefully that will help you get the best from your product and ensure safe.

For any futher information please contact CUSTOMER CARE 66 (0) 2493-6565 or visit www.mexappliance.com

CONTENT

SAFETY PRECAUTIONS	2
DANGER	2
WARNING	3-4
SPECIFICATION	4
DESCRIPTION OF PARTS	5
BEFORE USING KETTLE	6
USING THE KETTLE	6-7
USING A TEA INFUSER	7
BOIL-DRY PROTECTION	7
CLEANING AND MAINTENANCE	8
REMOVAL OF MINERAL DEPOSITS	8
ENVIRONMENTAL PROTECTION	9

SAFTY PRECAUTIONS

Before using this appliance, please read and follow the warnings and instructions in this manual, even if you are familiar with this appliance to prevent the damage that may occur on your property.



DANGER

- Read this manual carefully before using the appliance.
- Before connecting the appliance to the power supply, check that the voltage indicated on the appliance 220-240V corresponds with the voltage in your home.
- Do not immerse the appliance, power cord, the base or electric plugs in water or other liquid.
- Never wash the appliance in the dishwasher.
- Do not modify this appliance.
- Do not use the appliance when the power cord or the plug is damaged or when the appliance has been dropped or is damaged in any manner.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not position the appliance above hot surfaces, hob burners, or inside a hot oven.
- Do not unplug the appliance with wet hands or by pulling on the power cord.

If the power cord is damaged, it must be performed only by qualified technicians or an authorized technical support service immediately.

WARNING


- While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- To Be careful of refilling when the kettle is hot.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not touch the hot surface. Use the handle or the button.
- The attached base cannot be used for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- The appliance is not a toy. Do not let the children play it.
- The kettle is for household use only. Do not use outdoors.
- Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
- To disconnect, turn any control to "off" then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- The kettle can only use with the stand provided.
- If the kettle is overfilled, boiling water may spill out.
- Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.

- Save these instructions for the future.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

SPECIFICATION

Model	KPLG105TW-1
Rated voltage	220-240V
Frequence	50/60Hz
Rated Power	420-500W
Capacity	0.5 L
Size	14.7 x 9.8 x 22.0 CM.

DESCRIPTION OF PARTS

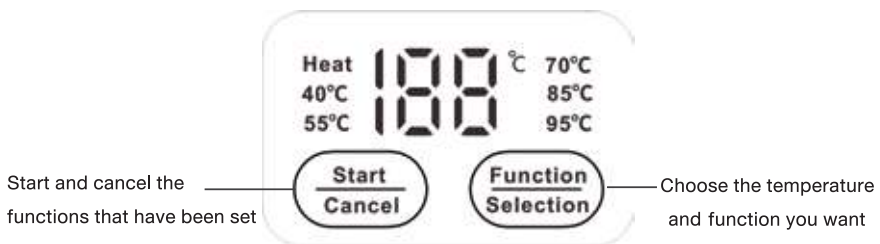

BEFORE USING KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water. Wipe the surface with damp cloth.

Note : The max capacity of MEX KATE Electric kettle model: KPLG105TW-1 is 0.5 L

USING THE KETTLE

1. Place the unit on the level surface.
2. To fill the kettle, remove it from the power base and open the lid by pressing the lid release button, fill with the desired amount of water, and then close the lid. Fill the kettle so that the water line is between the minimum and maximum water levels.
Too little water will cause the kettle switching off before the water has boiled.
Note : Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet
3. Position the kettle on the power supply base.
4. Connect the plug into a power outlet. Using the touch-sensitive screen to choose different function.
Function 1: Choose function selection, then choose Heat, then the kettle will start to boil the water to 100 degree.
Function 2: Choose function selection, then choose different function you need.

5. Lift the kettle from the power base and then pour the water.

Note : Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, do not open the lid while the water in the kettle is hot.

6. The kettle will not re-boil until choosing different function. The kettle may be stored on the power base when not in use.

Note : Always disconnect the power supply when not use.

HOW TO USE A TEA INFUSER

1. Boil water until desired temperature is reach.

2. Add the appropriate amount of tea leaves into the tea infuser.

3. Assemble the tea infuser to the lid directly. Check properly assembled before place the tea infuser inside the kettle and close the lid properly .

4. Leave tea leaves in a kettle for or a certain amount of time until ready to serve.

Note :

- Please be careful with hot water when opening the lid or remove the infuser while the kettle is hot.
- Different kinds of teas use different water temperature for brewing.

BOIL-DRY PROTECTION

When kettle operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and reboiling.

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet and cool it down completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
2. Wipe the appearance of body with a damp cloth or cleaner, never use a poisonous cleaner.
3. Remember to clean the filter at intervals. For easier cleaning, detach the filter and then replace it after cleaning.
4. When not in use, the power cord can be stored at the bottom of the appliance.

Caution : Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.

REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale at the bottom of kettle interior so as to cause the operation less efficiency. You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow the below instructions to use the white vinegar.

1. Fill the kettle with **1.5 cups (120 oz)** of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
2. Then discard the mixture in the kettle, then filling the kettle with clean water, boiling and then discard the water. Repeat several times until the odor of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

ENVIRONMENTAL PROTECTION



The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) requires that all used household appliances are not disposed of along with ordinary household waste. Used appliances must be collected separately in order to maximise recovery and recycling of their constituent parts and thus reduce their impact on health and the environment.



K A T E

PEN K INTER TRADING CO., LTD.

HEAD OFFICE : 1000/63-64 PB TOWER. 16th Floor. Sukhumvit 71 Road,
North Klongtan, Wattana, Bangkok 10110 TEL. 0-2493-6565 FAX : 0-2391-1141

SERVICE CENTER : 63/3 Moo 6 Soi Suksawat 76, Bangchak, Phra Pradaeng, Samut Prakan 10130

TEL. 0-2493-6565 FAX : 0-2464-1600 E-mail : servicecenter@penk.co.th

www.mexappliance.com